



LIFESTYLE[®] 135



HOME ENTERTAINMENT SYSTEM


SAFETY INFORMATION


Please read this guide

Please take the time to follow the instructions in this guide carefully. They will help you set up and operate your system properly and enjoy its advanced features. Please save this guide for future reference.

All Bose products must be used in accordance with local, state, federal, and industry regulations.

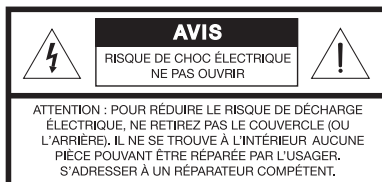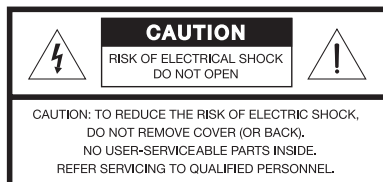

 The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this guide.

WARNINGS:

- To prevent electric shock, match the wide blade of the line cord plug to the wide slot of the AC (mains) receptacle. Insert fully.
- To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
- Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
- Contains small parts that may be a choking hazard. Not suitable for children under age 3.



CAUTIONS:

- Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance, and may void the warranty.
- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.

Notes:

- Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- The product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
- The product label is located on the bottom or the back of the product.
- The interconnect cables included with this system are not approved for in-wall installation. Please check your local building codes for the correct type of wire and cable required for in-wall installation.
- This product is intended to be used only with the power supply provided.



廢電池請回收

Please dispose of used batteries properly, following any local regulations. Do not incinerate.



This product conforms to all EU Directive requirements as applicable by law. The complete Declaration of Conformity can be found at www.Bose.com/static/compliance.

Additional safety information

See the additional instructions on the *Important Safety Information* sheet enclosed in the shipping carton.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. When a polarized plug is used; Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



HDMI and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

©2011 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

CONTENTS **5**

WELCOME **6**

Thank you	6
Unpacking	6
Wall mounting kit	7

SYSTEM SETUP **8**

Putting the system together	8
Step 1: Set up the speaker array	8
Step 2: Set up the control console	11
Step 3: Set up the Acoustimass® module	14
First time startup	15
Step 1: Set up the remote control	16
Step 2: Turn your system on and follow the on-screen instructions	16
If you have setup problems	17
Contacting customer service	17

WELCOME

Thank you

Thank you for choosing a Bose® LIFESTYLE® 135 system for your home. This guide provides step-by-step instructions for setting up your new system.

Your new home entertainment system includes a speaker array, control console, Acoustimass module, universal remote control and a dock for iPod or iPhone.


Unpacking

As you carefully unpack the carton, if any part appears damaged, do not attempt to use it. Notify Bose or your authorized Bose dealer immediately. For Bose contact information, refer to the address sheet included in the carton.


Be sure to save all of the packing materials. These provide the safest means for any necessary shipping or transporting.

Carton contents:

- **Speaker array**

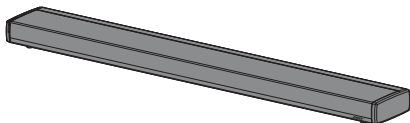

- **Acoustimass® module**

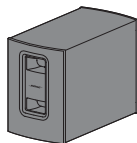

- **Accessory kits**

Each kit is identified by an icon on the box. The icons appear in the system setup steps to indicate where parts are located.

Cables and power cords kit



Audio input cable



AC power cord*



AM antenna

**The appropriate power cords for your region are supplied.*

Remote control kit



Remote control



Batteries



ADAPTiQ® audio calibration headset

Dock for iPod
or iPhone

FM antenna




IR emitter cable




Stereo audio cable

USB flash drive
(for system updating only)Speaker array
extension feetAcoustimass
module feetOperating
Guide

Control console kit

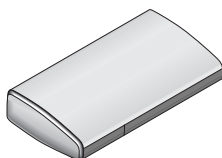

Control console

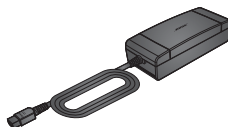

Power supply



HDMI™ cable

Wall mounting kit

The speaker array can be mounted on a wall. If you wish to do this, contact Bose to purchase the WB-135 Wall Mount Kit.

CAUTION: Do not use any wall-mounting hardware other than the WB-135 Wall Mount Kit to mount the speaker array on a wall.

CAUTION: Do not place the speaker array near or over a source of heat, such as a fireplace. Any damage that may occur to your speaker array as a result of placing it over a fireplace will not be covered by the limited warranty on your LIFESTYLE® system.

SYSTEM SETUP


Putting the system together

Note: The LIFESTYLE® 135 system uses the reflective surfaces of your room to deliver wide, spacious sound. For best sound quality, the speaker array should not be placed inside a cabinet, or diagonally in a corner.

Note: To avoid wireless interference, keep other wireless equipment, such as wireless computer network routers, cordless phones, microwave ovens, or other WIFI-enabled audio/video devices away from the speaker array and Acoustimass® module.

Step 1: Set up the speaker array

What you need:

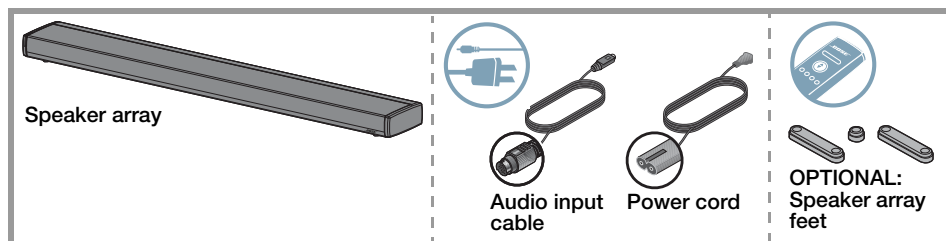


A. Lay the speaker array grille-side down on the table in front of your TV.

Note: To protect the surface of your table you may want to put a protective cloth under the speaker array until setup is complete. The foam bag removed from the speaker array could be used for this purpose.


Note: Be sure to remove all protective films from the speaker array before operating the system. They may affect acoustic performance if left in place.

B. Plug the audio input cable into the connector labeled **Audio In** on the speaker array. Make sure the flat surface with the arrow on the plug faces up.

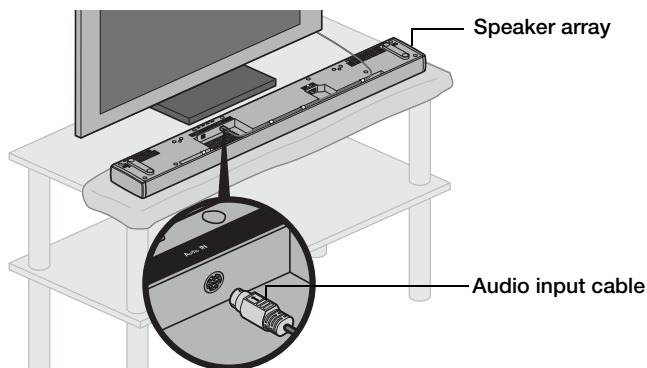


- C.** Plug the small end of the power cord into the connector labeled **Power**.


Note: Do not plug the power cord into an AC power outlet at this time. You will be instructed to do this later in the setup process.

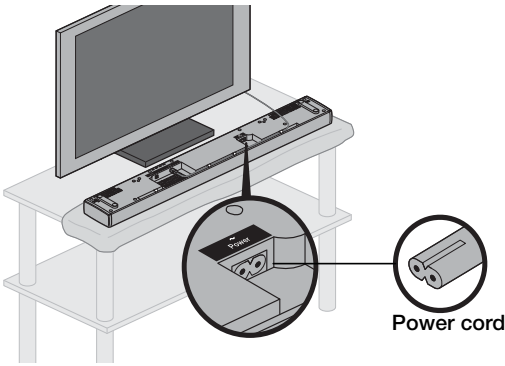

- D.** Arrange the cables as needed for your setup location.

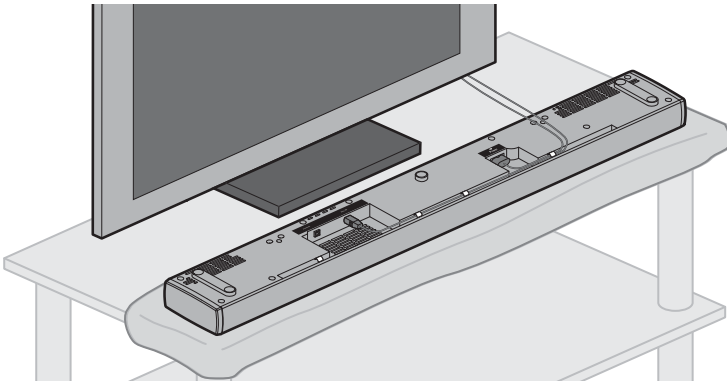


OPTIONAL: Secure cables under the clips in the channel running along the length of the speaker array.

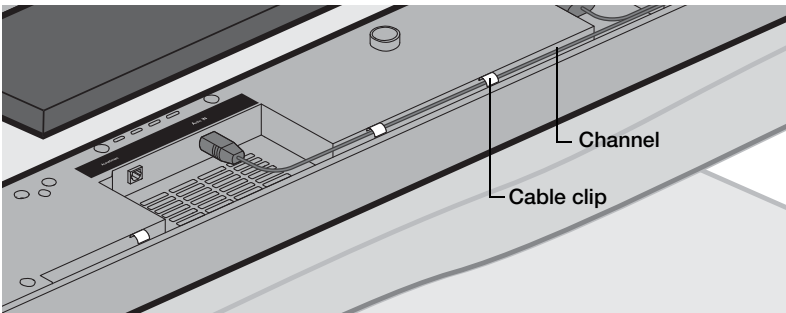

SYSTEM SETUP


- E.** Turn the speaker array over and place it in front of your TV with the speaker grille facing into the room.

CAUTION: The speaker array must be placed on a solid flat surface. For proper support, all of the feet on the bottom of the speaker array must be resting on the table top

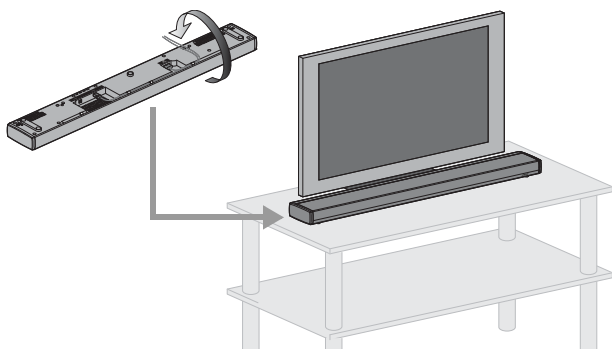


CAUTION: When positioning the speaker array, make sure it is not blocking any ventilation openings on your TV. Refer to the owner's guide that came with your TV and install in accordance with the manufacturer's instructions.

- F.** OPTIONAL: To raise the speaker array and allow more space under it, you can install the optional extension feet (supplied).

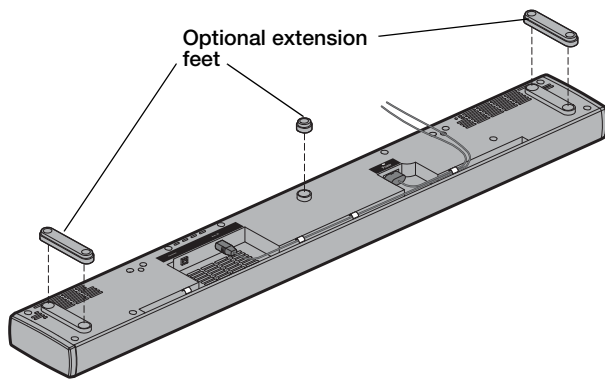


Step 2: Set up the control console

What you need:

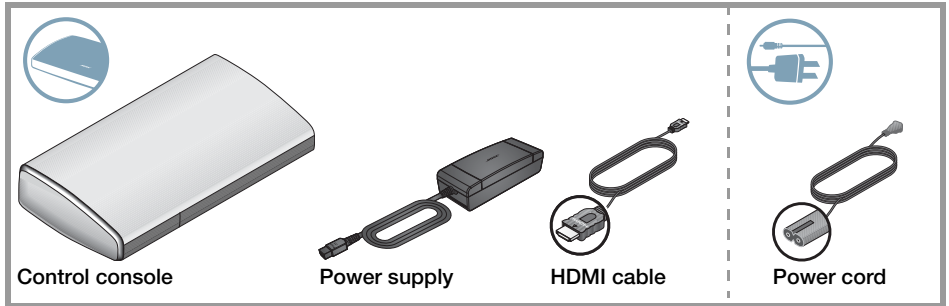

A. Place the control console on a flat, stable surface near your TV.

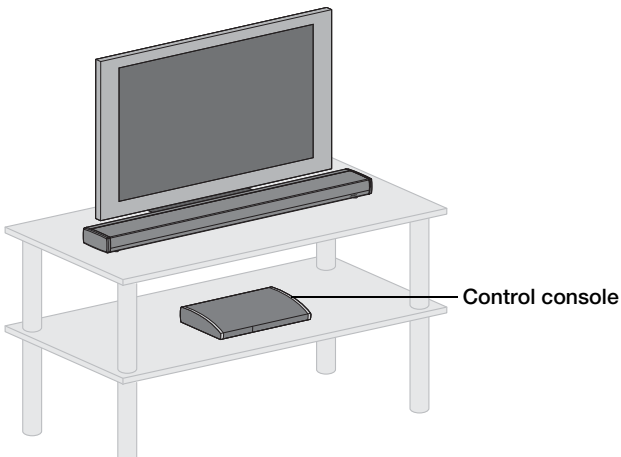


Note: Until your system is completely installed, it may be helpful to keep the control console positioned for easy access to its rear connection panel.


SYSTEM SETUP

- B.** Plug one end of the HDMI cable into an HDMI INPUT connector on your TV.

Note: If an HDMI cable is already connected to an HDMI input on your TV, you can use this cable. Just disconnect the other end.

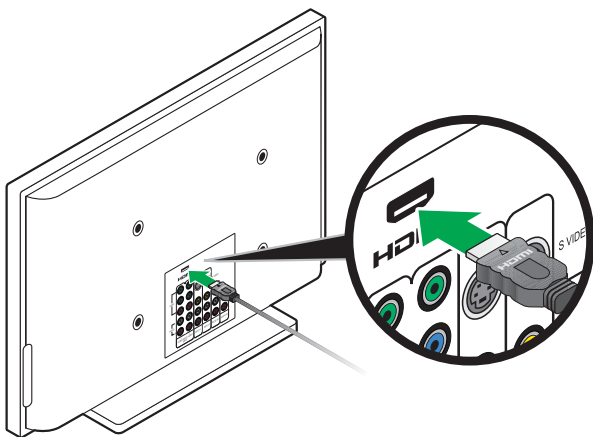


- C.** Plug the other end of the HDMI cable you are using into the connector labeled **HDMI OUT Video to TV** on the control console.

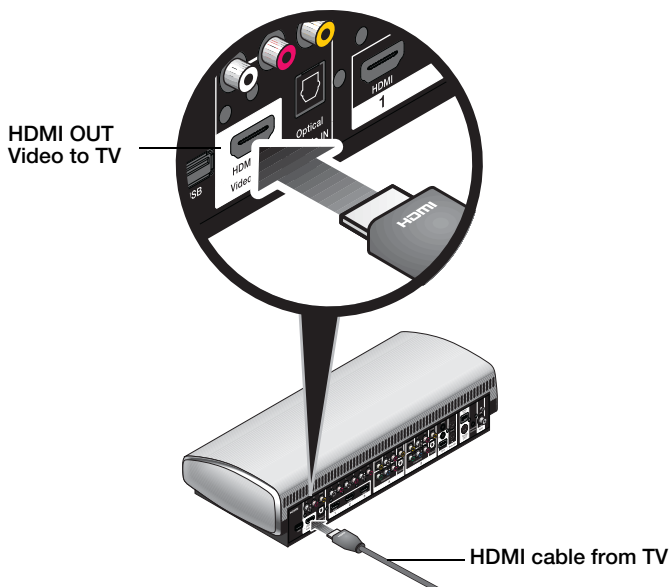


- D.** Plug the audio input cable coming from the speaker array into the connector labeled **Audio Out** on the control console.

Make sure the flat surface with the arrow on the plug faces up.

Note: Make sure the audio input cable is not plugged into a Bose® link connector.

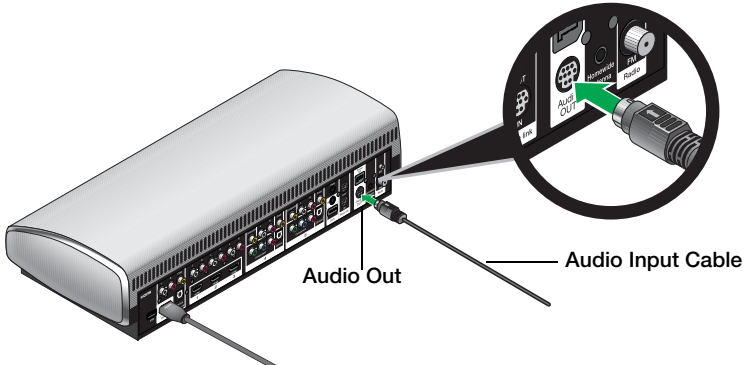


- E.** Plug the power supply output cord into the connector labeled **Power**.

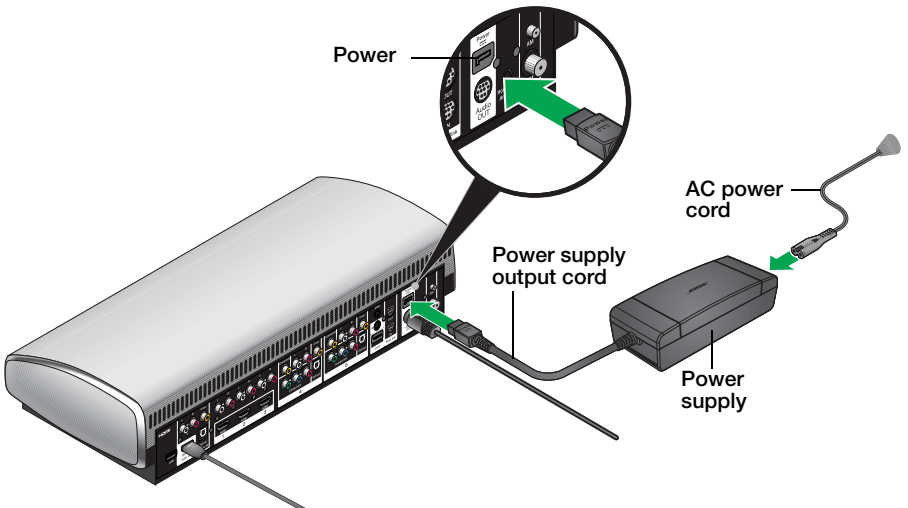

- F.** Plug a power cord into the power supply.
- G.** Plug the power cords from the speaker array and the control console into an AC (mains) power outlet.


Step 3: Set up the Acoustimass® module

What you need for the following steps:

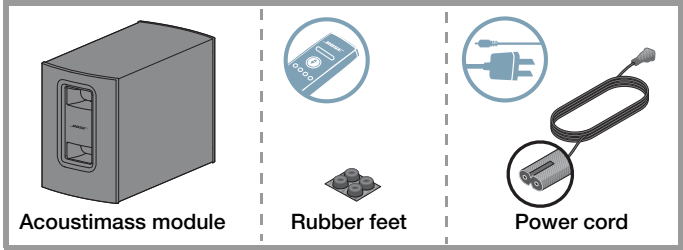


CAUTION: Choose a stable and level surface for the Acoustimass module. Vibration can cause the speaker to move, particularly on smooth surfaces like marble, glass, or highly polished wood.

- A.** When placing the Acoustimass® module on bare floors, or other smooth surfaces, attach the included rubber feet to the bottom of the module for greater stability and to protect your floor.

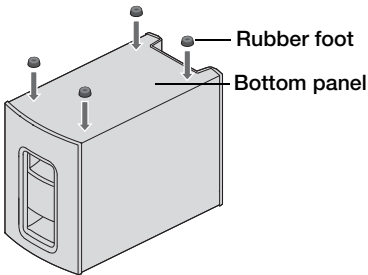


- B.** Plug the small end of the power cord into the **Power** connector.

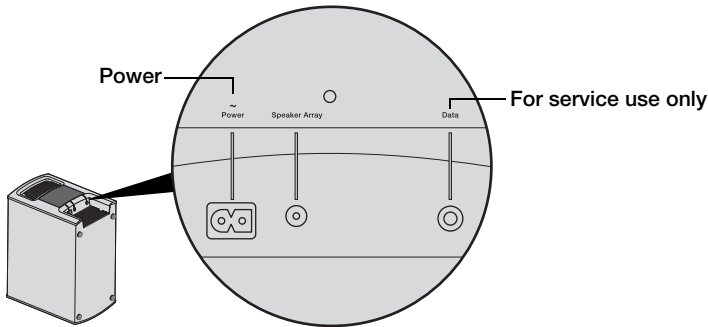


C. Place the Acoustimass® module according to the following guidelines:

- For best sound quality, stand the Acoustimass module on its feet along the same wall as your TV, or along any other wall in the front third of the room.
- The front opening of the module can face any direction.
- Make sure there is an AC outlet nearby.

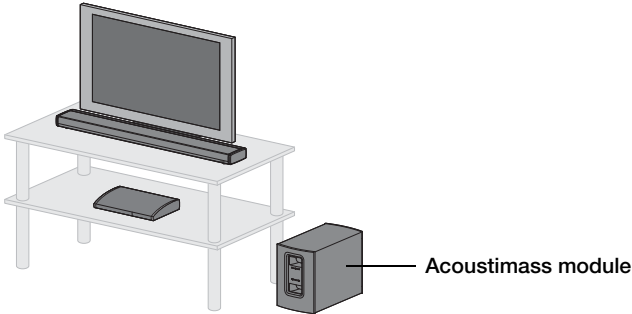

CAUTION: Do not operate the Acoustimass module on its front end, back end, side, or top.

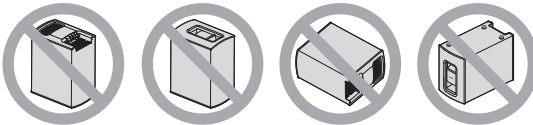


Note: Be sure to remove all protective films from the Acoustimass module before operating the system. They may affect acoustic performance if left in place.

D. Plug the Acoustimass module power cord into an AC (mains) power outlet.

First time startup

What you need for the following steps:

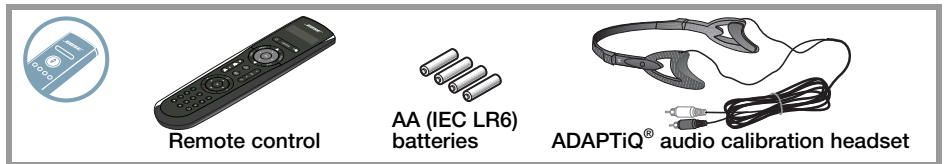


Before you start:

- Do not connect any devices to the control console at this time. The instructions provided on your TV will tell you when to do this.
- Make sure the speaker array and Acoustimass module are in their final positions before performing the ADAPTiQ audio calibration.

Step 1: Set up the remote control

- A.** Slide the battery compartment cover off the back of the remote control.

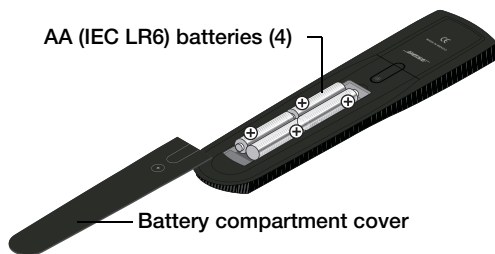

- B.** Install four AA (IEC LR6) batteries, matching the polarity markings (+ and -) to the markings inside the battery compartment.
- C.** Slide the battery cover back into place.


Step 2: Turn your system on and follow the on-screen instructions

- A.** Press the power button (⏻) on the control console to turn on your system.

Because the system is in a low power state when in standby, it takes several seconds to start. When the power light on the control console changes from blinking to steady green, your system is ready to use.



- B.** Check that the status indicator on the speaker array is off.



If the Status indicator is blinking orange:

- There is no wireless connection between the speaker array and the Acoustimass® module.
- See the Troubleshooting table in the back of the operating guide and follow the instructions for correcting the problem of "No Sound."

- C.** Turn on your TV.
- D.** Using the remote that came with your TV, change the TV input to the one that is connected to your LIFESTYLE® system.
- E.** Follow the instructions on your TV screen. You will be prompted to do the following:
 - Select your language.
 - Run the ADAPTiQ® audio calibration system.
 - Connect and set up audio/video devices using the UNIFY® intelligent integration system.
 - Configure your Bose® remote to control your connected devices.

If you have setup problems

If you experience any difficulties during the setup process, such as an unrecognized device remote or a connection error, you can go to the UNIFY menu at any time and correct or change part of your system setup. See “Changing Your System Setup” in your system operating guide.

For help in trying to resolve any problems, see the troubleshooting table in your system operating guide.

Contacting customer service


For additional help in solving problems, contact Bose® Customer Service. See the address sheet included with your system.


安全上の留意項目


このガイドは必ずお読みください。

ガイドの指示に注意して、慎重に従ってください。ご購入いただいたシステムを正しくセットアップして操作し、機能を十分に活用いただくために役立ちます。また、必要なときにすぐにご覧になれるように大切に保管しておくことをおすすめします。

Bose 製品をご使用いただく際は、必ず地域と業界指導の安全基準に従ってください。

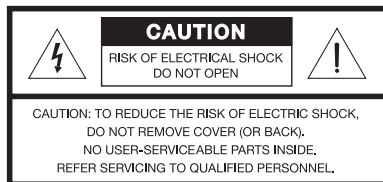

 正三角形に矢印付き稲妻マークが入った表示は、製品内部に電圧の高い危険な部分があり、感電の原因となる可能性があることをお客様に警告するものです。

 正三角形に感嘆符が入った表示は、製品本体にも表示されている通り、この取扱説明書の中で、取り扱い上およびメンテナンス上、重要な項目であることをお客様に警告するものです。

警告：

- 極性プラグを使用する場合、感電を避けるため、電源コードをコンセントにつなぐ際、プラグの幅が広い方の刃をコンセントの幅が広い方のスロットに差し込んでください。プラグは根元まで完全に差し込んでください。
- 火災や感電を避けるため、製品を雨にあてたり、湿度のある場所で使用しないでください。
- 水漏れやしずきがかかるような場所でこの製品を使用しないでください。また、花瓶などの液体が入った物品を製品の上や近くに置かないでください。他の電気製品と同様、システム内に液体が侵入しないように注意してください。液体が侵入すると、故障や火災の原因となることがあります。
- 火の付いたろうそくなどの火気を製品の上や近くに置かないでください。
- のどに詰まりやすい小さな部品が含まれています。3 歳未満のお子様には適していません。



注意：

- システムまたはアクセサリを改造しないでください。許可なく製品を改造すると、システムの安全性と性能が損なわれるだけでなく、法令遵守の問題が生じ、製品保証が無効となる場合があります。
- 大きな音量で長時間続けて聞くと、聴力に悪い影響を与えることがあります。ヘッドホンを長時間使用する場合は、過度な音量を避けるようにしてください。

注記：

- 万一の事故や故障に備えるために、電源プラグはよく見えて容易に手が届く位置にあるコンセントに接続してください。
- この製品は室内専用です。屋外、RV 車内、船上で使用するようには設計されていません。また、このような使用環境におけるテストも行われていません。
- 製品ラベルは本体の底または裏面にあります。
- 付属のケーブル類は、壁内や天井裏、床下等の隠ぺい配線用ではありません。隠ぺい配線を行う際は、お住まいの地域の法令等に準拠したケーブルや施工法をご確認ください。詳しくは専門の施工業者にご相談ください。
- この製品には付属の電源アダプタを使用してください。



廃電池請回収

使用済みの電池は、お住まいの地域の条例に従って正しく処分してください。焼却しないでください。




この製品は、法の定めに基づき、EU 指令の全ての要件に準拠しています。完全な適合宣言書については、www.Bose.com/static/compliance/を参照してください。

その他のご注意

その他の注意については、パッケージに同梱の『安全上の重要なご注意』シートを参照してください(北米のみ)。

安全上の留意項目

1. この説明書をよくお読みください。
2. 説明書の指示に従ってください。
3. すべての注意事項に留意してください。
4. すべての指示に従ってください。
5. この装置を水辺で使用しないでください。
6. 清掃の際は乾いた布を使用してください。
7. 換気孔は塞がないでください。製造元の指示に従って取り付けてください。
8. ラジエーター、暖房送風口、ストーブ、その他の熱を発する装置 (アンプを含む) の近くには設置しないでください。
9. 極性プラグを使用する場合、極性プラグや接地極付きプラグの安全機能を損なうような使い方はしないでください。極性プラグには 2 つの刃があり、片方の刃がもう一方の刃よりも幅が広がっています。また、接地極付きプラグには 2 つの刃に加え、接地用のアース棒が付いています。極性プラグの広い方の刃および接地極付きプラグのアース棒は、お客様の安全を守る機能を果たします。製品に付属のプラグがお使いのコンセントに合わない場合は、電気技師に連絡して新しいコンセントに取り替えてください。
10. 電源コードが踏まれたり挟まれたりしないように保護してください。特にプラグやテーパータップ、装置側の接続部などには注意してください。
11. 製造元の指定するアタッチメントまたはアクセサリのみを使用してください。
12. 製造元の指定する、または製品と一緒に購入されたカート、スタンド、三脚、ブラケット、または台以外の使用は避けてください。カートを使用する場合、製品の載ったカートを移動する際には転倒による負傷が起きないように十分注意してください。
13. 雷雨時や長期間使用しない場合は、装置の電源を抜いてください。
14. 修理が必要な際には、サービスセンターにお問い合わせください。装置に何らかの損傷がある場合、たとえば、電源コードやプラグの損傷、液体や物が装置内に落下した場合、装置に雨や液体がかかった場合、正常に機能しない場合、装置を落とした場合などには、修理が必要です。

HDMI および HDMI のロゴは HDMI Licensing, LLC の米国および他の国々における商標または登録商標です。

iPod および iPhone は Apple, Inc. の商標であり、アメリカ合衆国および他の国々で登録されています。

©2011 Bose Corporation. 本書のいかなる部分も、書面による事前の許可のない複写、変更、配布、その他の使用は許可されません。

安全上の留意項目

この「安全上の留意項目」は、製品を安全に正しくお使いいただき、あなたや他の人々への危害や財産への損害を未然に防止するため、いろいろな絵表示をしています。内容をよく理解してから本文をお読みください。

絵表示について



警告

この表示を無視して、誤った取り扱いをすると、人が死亡または重傷を負う可能性が想定される内容を示します。



注意

この表示を無視して、誤った取り扱いをすると、人が損傷を負う可能性が想定される内容および物的損害のみの発生が想定される内容を示します。



△ 記号は警告・注意を促す内容があることを告げるものです。



⊘ 記号は禁止の行為であることを告げるものです
(左図の場合は分解禁止を意味します)。



● 記号は行為を強制したり指示する内容を告げるものです。

●異常が発生したとき



警告



電源プラグを抜く

変なにおいや音がしたときは、すぐに電源スイッチを切り、電源プラグを抜く

そのままの状態で使用すると、火災や感電の原因となります。すぐに電源スイッチを切り、電源プラグをコンセントから抜いてください。煙が出なくなるのを確認して、販売店に修理をご依頼ください。



電源プラグを抜く

内部に水や異物が入ったときは、すぐに電源スイッチを切り、電源プラグを抜く

そのままの状態で使用すると、火災や感電の原因となります。すぐに電源スイッチを切り、電源プラグをコンセントから抜いて、販売店に点検をご依頼ください。特にお子様のいるご家庭ではご注意ください。



電源プラグを抜く

落としたり、キャビネットを破損したときは、すぐに電源スイッチを切り、電源プラグを抜く

そのままの状態で使用すると、火災や感電の原因となります。すぐに電源スイッチを切り、電源プラグをコンセントから抜いて、販売店に点検をご依頼ください。



交換を依頼

電源コードや電源プラグが傷んだ場合は交換する

電源コードや電源プラグが傷んだ状態（芯線の露出、断線、変形など）で使用すると、火災や感電の原因となります。販売店に交換をご依頼ください。

●設置、保管するとき



警告



禁止

本機の上や周囲に、小さな金属物を置かない

通風孔などから内部に落下した場合、火災や感電の原因となります。



専用品を使用

電源コードは付属の専用品を使用する

専用電源コード以外の使用は、火災や感電の原因となります。また、本機の専用電源コードを他の機器に使うこともお止めください。



専用品を使用

AC アダプターは付属の専用品を使用する

専用 AC アダプター以外の使用は、火災や感電の原因となります。また、本機の専用 AC アダプターを他の機器に使うこともお止めください。



確実に差す

電源プラグは根元まで確実に差し込む

差し込みが不完全な場合、発熱による感電や火災の原因となります。また、ほこりがたまり易くなったり、プラグの金属部分に触れる危険性があります。



禁止

不安定な場所に置かない

ぐらついた台の上や傾いた所、振動する所など、不安定な場所に置かないでください。落ちたり倒れたりして、けがや事故の原因となります。



禁止

タコ足配線をしない

コンセントや配線器具に同時に多数の機器を接続して電源を取ると、コードなどが過熱し、火災の原因となります。

●設置、保管するとき

⚠ 警告



適切な電源
(AC100V)
を使用

交流 100 ボルトの電源を使用する

海外などで、表示された電源電圧（交流 100 ボルト）以外で使用すると、火災や感電の原因となります。



安全な場所
に保管

梱包袋は安全な場所に保管する

製品を梱包していた袋は、お子様の手の届かない安全な場所に保管してください。窒息などの事故の原因となります。

⚠ 注意



禁止

ほこり、油煙、湯気、湿気、高温の場所に置かない

火災や感電の原因となることがあります。



注意

ゴムやビニール製品に本体を長期間接触させない

外装が変質し跡が残ることがあります。



必ず実行

移動させる場合は、電源コードその他の接続線を外す

電源コードに無理な力が加わって傷付き、火災や感電の原因となることがあります。また他の接続線が引っかかり、けがの原因となることがあります。



引っ張り禁止

電源プラグを抜くときは、電源コードを引っ張らない

電源コードが傷付き、火災や感電の原因となることがあります。必ず電源プラグを持って抜いてください。

●使用するとき

⚠ 警告



ぬれ手禁止

ぬれた手で電源プラグを抜き差ししない

感電の原因となります。



接触禁止

雷が鳴り出したら、本体やケーブル類に触れない

感電の原因となります。

⚠ 注意



音を小さく

電源を入れる前には音量を最小にする

突然大きな音が出て、聴力障害などの原因となることがあります。



手を入れない

スピーカー開口部に手を入れない

けがの原因となることがあります。特にお子様がいるご家庭ではご注意ください。



禁止

長時間音が歪んだ状態で使用しない

スピーカーが発熱し、火災の原因となることがあります。



禁止

大音量で長時間続けて聞かない

大きな音量で長時間続けて聞くと、聴力に悪い影響を与えることがあります。特にヘッドホンのご使用時にはご注意ください。



電源プラグ
を抜く

お手入れのときは電源プラグを抜く

安全のため、お手入れは電源プラグを抜いてから行ってください。感電の原因となることがあります。

安全上の留意項目

●使用するとき

警告



必ず実行

定期的に内部の掃除をする

5年に一度程度を目安に、機器内部の掃除を販売店などにご相談ください。内部にほこりがたまったまま長時間掃除をしないと、火災や故障の原因となることがあります。特に、湿気の多くなる梅雨期の前に行うと、より効果的です。なお、掃除費用については販売店などにご相談ください。



必ず実行

電源プラグやコンセント部の掃除をする

電源プラグを差してあるコンセント部にほこりがたまると、火災の原因となることがあります。定期的にコンセント部の掃除をしてください。

●電池使用時

警告



注意

電池内部から漏れ出た液（電解液）には直接ふれない

- ・液が目に入ったときは、失明など障害のおそれがありますので、こすらずに水道水などの多量のきれいな水で十分に洗った後、すぐに医師の治療を受けてください。
- ・液が皮膚や衣服に付着した場合には、皮膚に障害を起こすおそれがありますので、すぐに多量の水道水などのきれいな水で洗い流してください。
- ・液を舐めた場合には、すぐにうがいをして医師に相談してください。



禁止

指定された種類以外の電池は使用しない

発熱や破裂、液漏れにより、火災やけが、あるいは周囲の汚損の原因となります。



禁止

電池を加熱、火の中に入れるなどしない

過度に温度が上がった場合、および火中投入した場合には、電池の内圧が高まり、破裂により、火災やけが、あるいは周囲の汚損の原因となります。



分解禁止

電池を分解しない

無理に電池を分解しようとすると、手指を傷つけたり、電池内部の電解液が飛び散って衣服を損傷したり、皮膚のただれや化学やけどを起こすばかりでなく、目に入った場合には、失明するおそれがあります。



禁止

電池のプラス+とマイナス-をショートさせない

ショート（短絡）させると電池は激しく発熱し、液漏れ、破裂により、火災やけが、あるいは周囲の汚損の原因となります。ショート（短絡）事故防止のためコイン、ネックレス、ガムの包装紙などの金属と一緒に持ち運んだり、保管しないでください。また、アルミホイル、ガムの包装紙などで電池を包まないでください。



禁止

乾電池は充電しない

破裂や液漏れにより、火災やけが、あるいは周囲の汚損の原因となります。



禁止

電池端子に直接はんだ付けをしない

電池を加熱することになり、温度上昇によって使用している樹脂部品の変形を生じ、液漏れ、内部ショートなどの異常を生じ発熱、液漏れ、破裂により、火災やけが、あるいは周囲の汚損の原因となります。

注意



混在禁止

種類の異なる電池や、新しい電池と古い電池を混ぜて使用しない

混用すると液漏れ、破裂により、火災やけが、あるいは周囲の汚損の原因となります。未使用の電池と使用済み、または、使いかけの電池を混ぜて使うと、早く消耗した電池が過度の放電状態（過放電）となり、不経済なばかりではなく液漏れ、破裂の原因となります。










禁止





投げつけたりして強い衝撃を与えない

電池を変形させないでください。電池を落下させて変形させたり、無理な力を加えて変形させると、電池封口部のゆがみによって液漏れ、内部ショートなどの異常を生じ発熱、液漏れ、破裂により、火災やけが、あるいは周囲の汚損の原因となります。

●電池使用時

 注意	
 必ず実行	使い切った電池はすぐに機器から取り出す 過放電させると液漏れ、破裂により、火災やけが、あるいは周囲の汚損の原因となります。
 水ぬれ禁止	電池は濡らさない 水や海水、ジュースなどの液体で電池を濡らすとさびたり、ショートする原因となります。ショートすると液漏れ、破裂により、火災やけが、あるいは周囲の汚損の原因となります。
 禁止	外装チューブをはがさない 電池の外装チューブをはがしたり、キズをつけないこと。電池がショート状態となり易く、電池が液漏れ、発熱、破裂する原因となります。
 必ず実行	長い間使用しない時は、電池を機器から取り出す スイッチを切っても機器の中の電池は電気が少しずつ減っていきます。液漏れの原因にもなりますので長期間使用しない場合は電池を取り出しておいてください（非常用を除く）。
 必ず実行	極性表示（プラス+とマイナス-）に従って正しく入れる 電池のプラス+とマイナス-を逆に接続すると、充電されたり、機器によっては電池がショート（短絡）状態になり発熱、液漏れ、破裂により、火災やけが、あるいは周囲の汚損の原因となります。
 必ず実行	電池は乳幼児の手の届かないところに置く 誤って飲み込むと、窒息や胃などへの障害の原因となることがあります。万一飲み込んだ場合は、直ちに医師に相談してください。

●電波について

 警告	
 分解・改造 禁止	本製品を分解・改造して使用しないでください。電波法に抵触します
 22cm以上離す	心臓ペースメーカーまたは除細動器などを装着している人から 22cm 以上離して使用してください ペースメーカーに影響を与え、重大事故につながる場合があります。
 使用禁止	病院内や航空機の中などでは使用しないでください 高度な安全を要求される場所では絶対に使用しないでください。特定医療機器や航空機の計器類などの誤動作の原因となります。

製品のゴム足について

- ・ゴム足は素材の性質から、設置面の塗料によっては、移行または汚染を示す可能性があります。事前にご確認のうえご使用ください。
- ・付属のゴム足は高摩擦性を有している分、塗装面との接触面に密着しやすい性質を持っています。接触面の一部を剥がしてしまう可能性もありますので、事前にご確認のうえご使用ください。

はじめに **10**

お買い上げありがとうございます	10
付属品の確認	10
ウォールマウントキット	11

システム設定 **12**

システムコンポーネントの接続	12
ステップ 1: スピーカーアレイの設定	12
ステップ 2: コンソールのセットアップ	15
ステップ 3: アクースティマスモジュールのセットアップ	18
システムの起動	19
ステップ 1: リモコンの設定	20
ステップ 2: システムの電源投入およびその後の操作手順	20
セットアップ時のトラブル	21
ユーザーサポートセンターへのお問い合わせ	21

はじめに

お買い上げありがとうございます

Bose® LIFESTYLE® 135 system をご購入いただき、ありがとうございます。このガイドでは、ご購入いただいたシステムをセットアップする方法について、順を追ってご説明いたします。システムのご購入時は、まずこちらの「①設置ガイド」を先にお読みください。

このホームエンターテインメントシステムには、スピーカーアレイ、コンソール、アコースティマスモジュール、ユニバーサルリモコン、および iPod/iPhone 用ドックが付属しています。


付属品の確認

箱の中身を取り出した際に、もしも付属品が不足している場合や損傷などが発見された場合は、そのままの状態を保ち、直ちに買い上げになった販売店までご連絡ください。そのままでの使用はおやめください。


箱や梱包材は、後日修理やメンテナンス等が必要になった場合のために保管しておくことをおすすめします。

内容物

• スピーカーアレイ

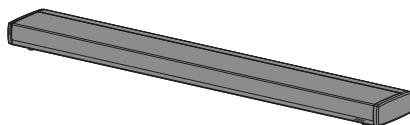

• アコースティマスモジュール

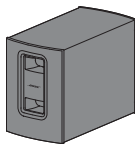

• アクセサリーキット

各キットは、箱に印刷されているアイコンによって区別できます。これらのアイコンは、システムのセットアップ手順でパーツの場所を示すために使用されます。

ケーブル・ 電源コードキット



音声入力ケーブル



電源コード*



AM アンテナ

*電源コードはご使用の国に適したものが提供されています。

リモコンキット



リモコン



電池



ADAPTiQ® 自動音場補正システム用 ヘッドセット



iPod/iPhone
用ドック



FM アンテナ



IR (赤外線)
エミッター



ステレオ音源ケーブル



操作ガイド



USB ドライブ (システム
アップデート専用)




スピーカーアレイ用
調整足




アコースティマス
モジュール用ゴム足

コンソールキット

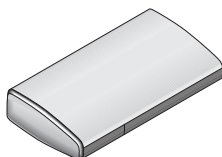

コンソール

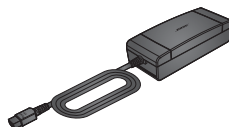

電源アダプター



HDMI™ ケーブル

ウォールマウントキット

スピーカーアレイは壁に取り付けて使用できます。壁に取り付けて使用するには、ボーズ販売店にお問い合わせの上、ウォールマウントキット WB-135 をご購入ください。

注意：ウォールマウントキット WB-135 以外の壁掛け用金具を使ってスピーカーアレイを壁に取り付けることはおやめください。

注意: スピーカーアレイを暖炉などの熱源の近くに置かないでください。暖炉などの上に設置したことが原因でスピーカーアレイが破損した場合、LIFESTYLE® system に関する保証は適用されません。

システム設定


システムコンポーネントの接続

注記： LIFESTYLE® 135 system は室内の反響面を利用して広がりのある豊かなサウンドを実現しています。最高の音質をお楽しみいただくため、スピーカーアレイを戸棚の中に設置したり、お部屋の角に斜めに設置することは避けてください。

注記： ワイヤレス信号の干渉を回避するには、スピーカーアレイおよびアコースティクスモジュールを、コンピューター用ワイヤレスネットワークルーター、コードレス電話、電子レンジ、その他の Wi-Fi 対応 AV 機器など、ほかのワイヤレス機器から離れた場所に設置します。

ステップ 1：スピーカーアレイの設定

必要となるもの：

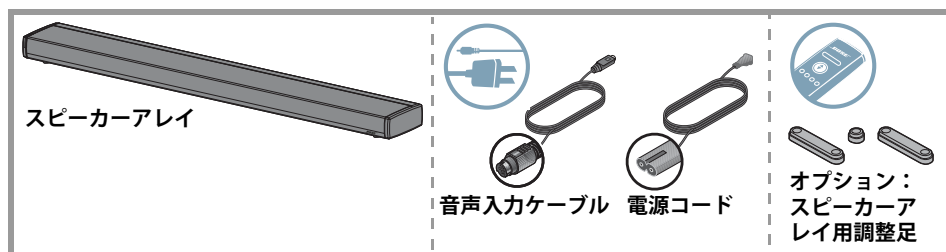


A. スピーカーアレイのグリル側を下に向けて、テレビ台のテレビの前に置きます。

注記： このときスピーカーアレイの下に保護用の布を置くと、テレビ台の表面が傷つくのを防ぐことができます。スピーカーアレイを包んでいた保護カバーを使用することもできます。


注記： システムを使用する前に、スピーカーアレイから全ての保護フィルムを剥がしてください。保護フィルムが残っていると、オーディオパフォーマンスが低下する原因となります。

B. 音声入力ケーブルをスピーカーアレイの **[Audio In]** 端子に差し込みます。矢印が表示された平らな面を上に向けてプラグを差し込んでください。

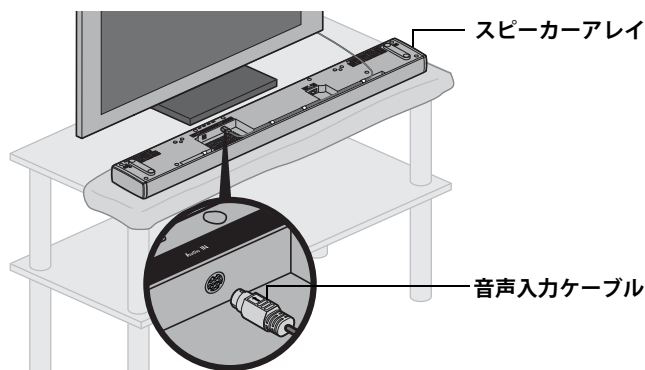


- C.** 電源コードの小さい方のプラグを、**[Power]** というラベルの付いた端子に差し込みます。


注記：電源コードは、まだ電源コンセントに差し込まないでください。コンセントへの接続は、このセットアップ手順の後半で行います。

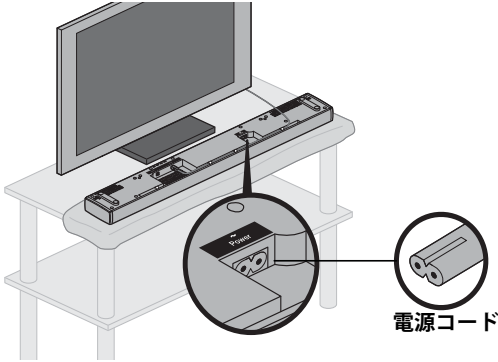

- D.** 設置場所のニーズに応じてケーブルを配置します。

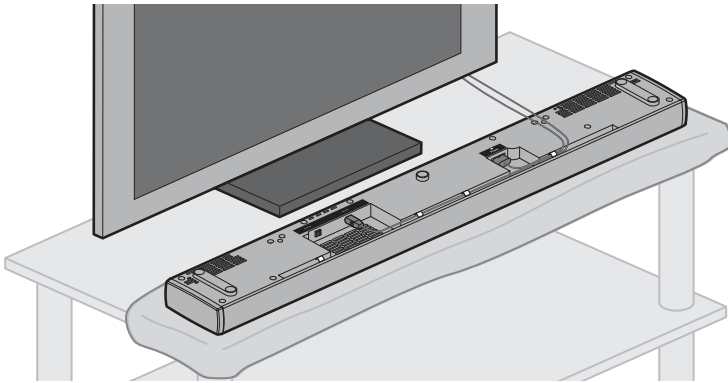


オプション：スピーカーアレイの長い方の辺に沿って設けられた溝部分にあるクリップの下にケーブルを固定することもできます。

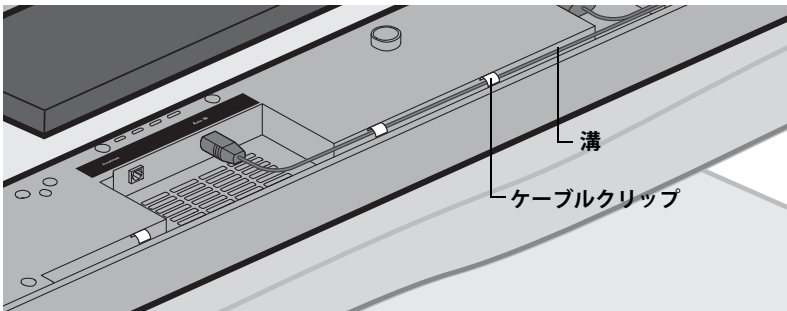

システム設定


- E.** スピーカーアレイをひっくり返し、スピーカーグリルを部屋の中心に向けた状態でテレビの前に配置します。

注意：スピーカーアレイは安定した平らな面に設置してください。正しく設置するには、スピーカーアレイの底にある足が全て台の上にとしっかりと載っている必要があります。

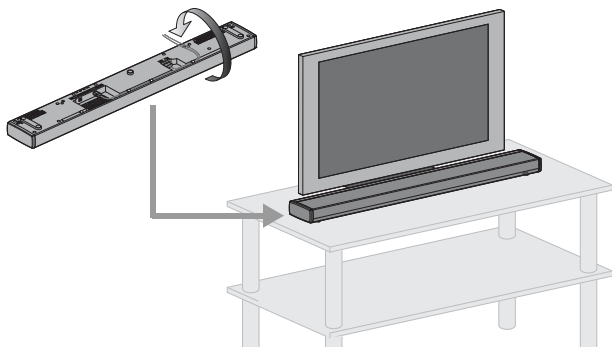


注意：スピーカーアレイを設置するときは、テレビの通気孔を塞がないように注意してください。お使いのテレビに付属している取扱説明書を参照し、製造元の指示に従って設置してください。

- F.** オプション：スピーカーアレイの位置を高くして台とアレイの間にスペースを空けるには、オプションとして製品に付属の調整足を取り付けます。

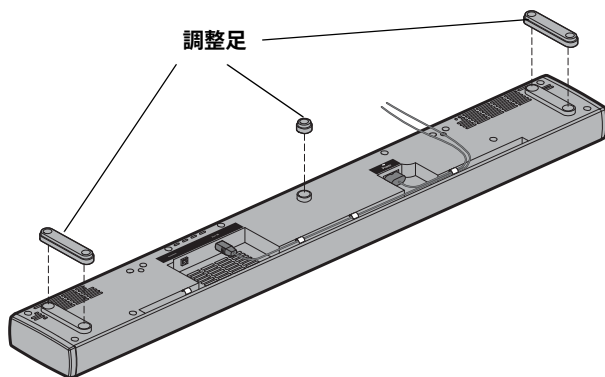


ステップ 2：コンソールのセットアップ

必要となるもの：

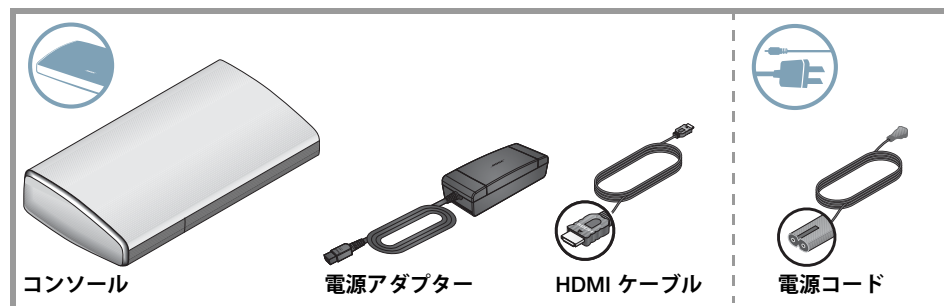

A. コンソールは、テレビに近い安定した場所に水平に設置します。

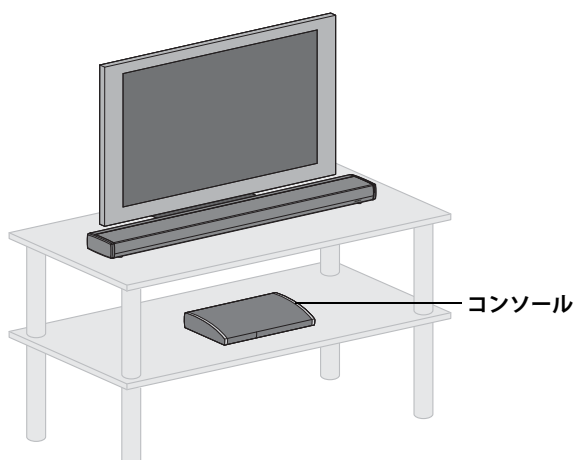


注記：システムの設置が完了するまで、コンソールはひとまず背面パネルにある接続部に手が届きやすい場所に仮置きすることをおすすめします。


システム設定

B. HDMI ケーブルの片側をテレビの HDMI 入力端子に差し込みます。

注記：テレビの HDMI 入力に HDMI ケーブルを接続済みの場合は、接続されているケーブルをそのまま使用するため、反対側を抜いてください。

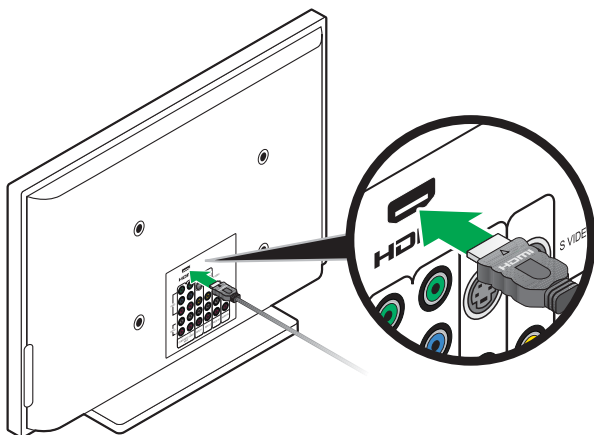


C. HDMI ケーブルの反対側を、コンソールの **[HDMI OUT Video to TV]** 端子に差し込みます。

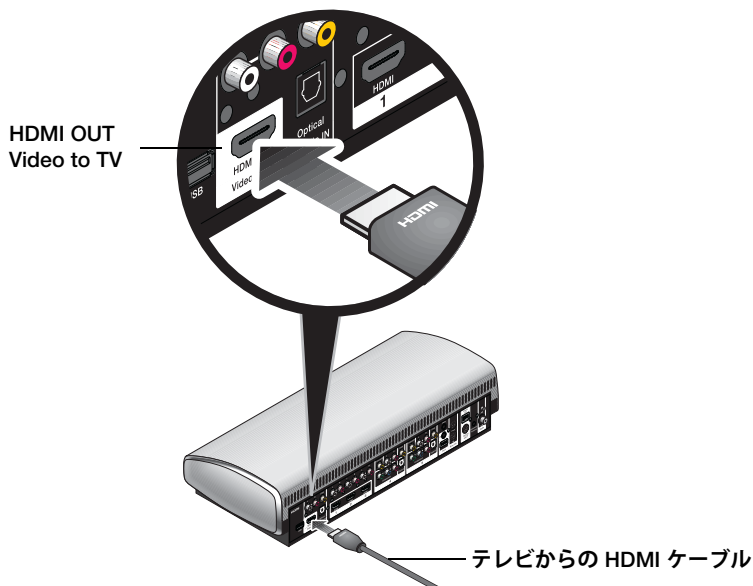


- D.** スピーカーアレイに接続した音声入力ケーブルを、コンソールの **[Audio Out]** 端子に接続します。

矢印が表示された平らな面を上に向けてプラグを差し込んでください。

注記： 音声入力ケーブルを [Bose® Link] 端子に差し込まないでください。

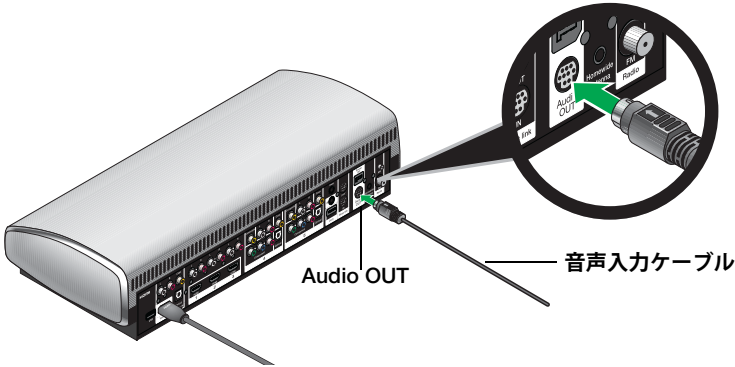

- E.** 電源アダプター出力ケーブルをコンソールの **[Power]** 端子に差し込みます。

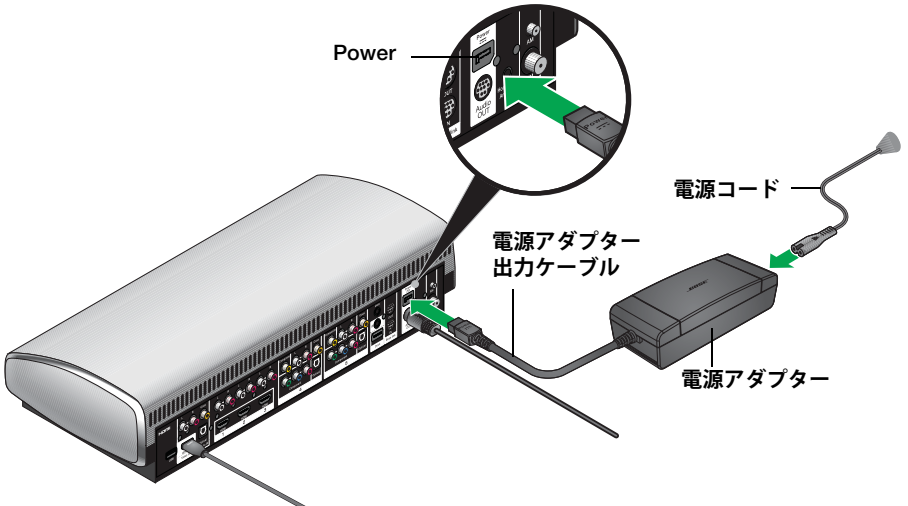


- F.** 電源コードを電源アダプターに差し込みます。

- G.** スピーカーアレイとコンソールの電源コードを電源コンセントに差し込みます。


ステップ 3：アコースティマスモジュールのセットアップ

このステップで必要なもの：

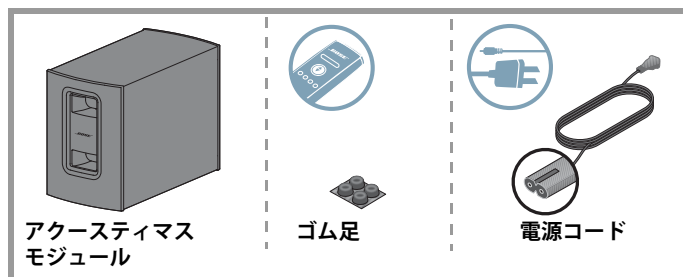


注意：アコースティマスモジュールは安定した水平な面に設置する必要があります。特に大理石やガラス、磨き上げた木などの滑りやすい表面では、音の振動でスピーカーの位置がずれることがあります。

- A.** アコースティマスモジュールを床やその他の滑りやすい面に直接置く場合は、安定性の向上と床の保護のため、モジュールの下に付属のゴム足を取り付けることをおすすめします。

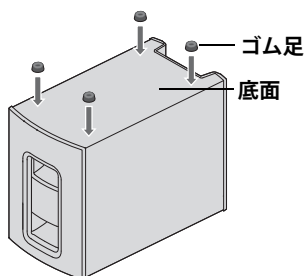


- B.** 電源コードの小さい方のプラグを、[Power] 端子に差し込みます。

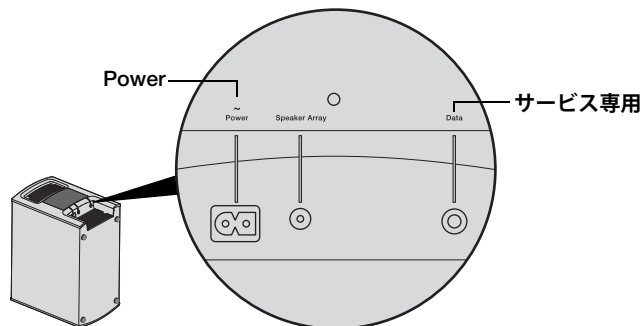


C. 次のガイドラインに沿ってアコースティマスモジュールを設置します。

- 最高の音質を得るには、アコースティマスモジュールをテレビと同じ壁に沿って置くか、あるいは左右の壁沿いでテレビの近辺 (テレビのある壁から見て部屋の 3 分の 1 以内の場所) に置きます。
- モジュール前面の開口部はどちらの方向を向けてもかまいません。
- 電源コンセントが近くにある場所に設置してください。

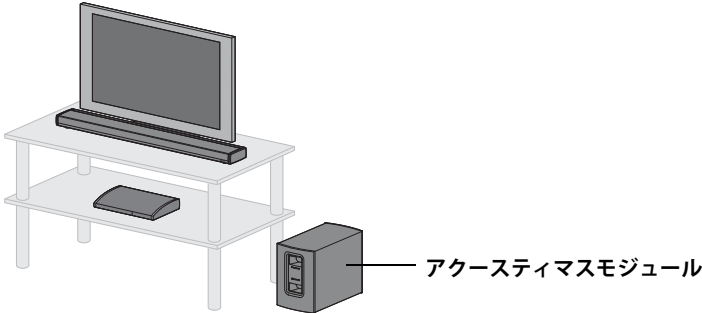

注意：アコースティマスモジュールの前面や背面を底にした状態や、横倒し、または天地逆の状態で使用しないでください。

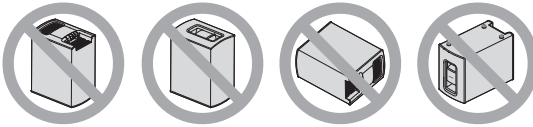

注記：システムを使用する前に、アコースティマスモジュールから全ての保護フィルムを剥がしてください。保護フィルムが残っていると、オーディオパフォーマンスが低下する原因となります。

D. アクーティマスモジュールの電源コードを電源コンセントに差し込みます。

システムの起動

このステップで必要なもの：




作業を始める前に：

- コンソールには、まだ他の機器を接続しないでください。テレビ画面に表示される手順に従って、機器を接続してください。
- ADAPTiQ® システムによる自動音場補正を行う前に、スピーカーアレイとアクーティマスモジュールが実際に使用する場所に設置されていることを確認してください。

ステップ 1：リモコンの設定

- A. リモコンの裏側にあるバッテリーカバーをスライドして外します。

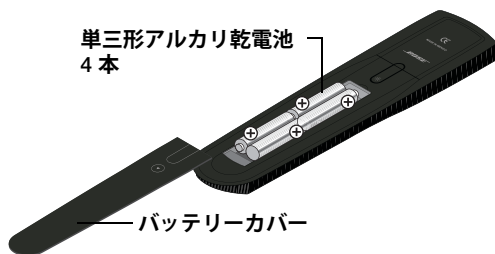

- B. 製品に付属の単三形アルカリ乾電池 4 本を、電池ケース内にある+と-の表示に向きを合わせて入れます。
- C. バッテリーカバーをスライドして元に戻し、パチンと音がするまで閉じます。


ステップ 2：システムの電源投入およびその後の操作手順

- A. コンソールの電源ボタン (⏻) を押して、システムの電源を入れます。

電源投入時は省電力状態から復帰するため、起動までに数秒～十数秒間を要します。コンソールの電源ランプの点滅が緑の点灯に変わると、システムが使用可能な状態になります。



- B. スピーカーアレイのステータスランプが消灯していることを確認してください。



ステータスランプがオレンジ色に点滅する場合：

- スピーカーアレイとアコースティマスモジュールの間にワイヤレス接続が確立されていません。
- 操作ガイドの後半にある「故障かな?と思ったら」の表を参照し、「音が出ない」の対処方法に従ってください。

- C.** テレビの電源を入れます。
- D.** テレビのリモコンまたはテレビ本体のボタンを使用して、テレビ入力を LIFESTYLE® system を接続した HDMI 入力に切り替えます。
- E.** テレビ画面に表示される手順に従い、Unify® テクノロジーによるセットアップを実施します。セットアップの流れは、以下の通りです。
- 言語を選択します。
 - ADAPTiQ® 自動音場補正システムを実行します。
 - Unify® テクノロジーのナビゲーションに従い、AV 機器を接続してセットアップします。
 - Bose® リモコンで接続機器を操作できるように設定します。

セットアップ時のトラブル

機器がリモコンに反応しない場合や接続に障害がある場合など、セットアップ中にトラブルが発生したときは、いつでも Unify® メニューに戻って、システム設定を修正または一部変更することができます。詳しくは、操作ガイドの「システム設定の変更」を参照してください。


トラブルが発生した場合の解決方法については、操作ガイドの「故障かな？と思ったら」を参照してください。

ユーザーサポートセンターへのお問い合わせ

お問い合わせ先

故障および修理のお問い合わせ先

ボーズ株式会社 サービスセンター


お客様専用ナビダイヤル  0570-080-023

PHS、IP電話からは、Tel 03-5489-1124へおかけください。

〒206-0035 東京都多摩市唐木田1-53-9 唐木田センタービル

製品等のお問い合わせ先

ボーズ株式会社 ユーザーサポートセンター

お客様専用ナビダイヤル  0570-080-021

PHS、IP電話からは、Tel 03-5489-0955へおかけください。



342900-0010

BOSE[®]
Better sound through research[®]

2011 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM342900 Rev 00